

PARTS LIST

BCV5020-01

CONTENTS

1. MAIN BODY	1 ~ 2
2. GEARCASE.....	3 ~ 4
3. ENGINE	5 ~ 8
4. CARBURETOR, FUEL TANK	9 ~ 12
5. ACCESSORIES	13 ~ 14


2016. 02.



MARUYAMA


P/N 524247

1. BCV5020-01
MAIN BODY

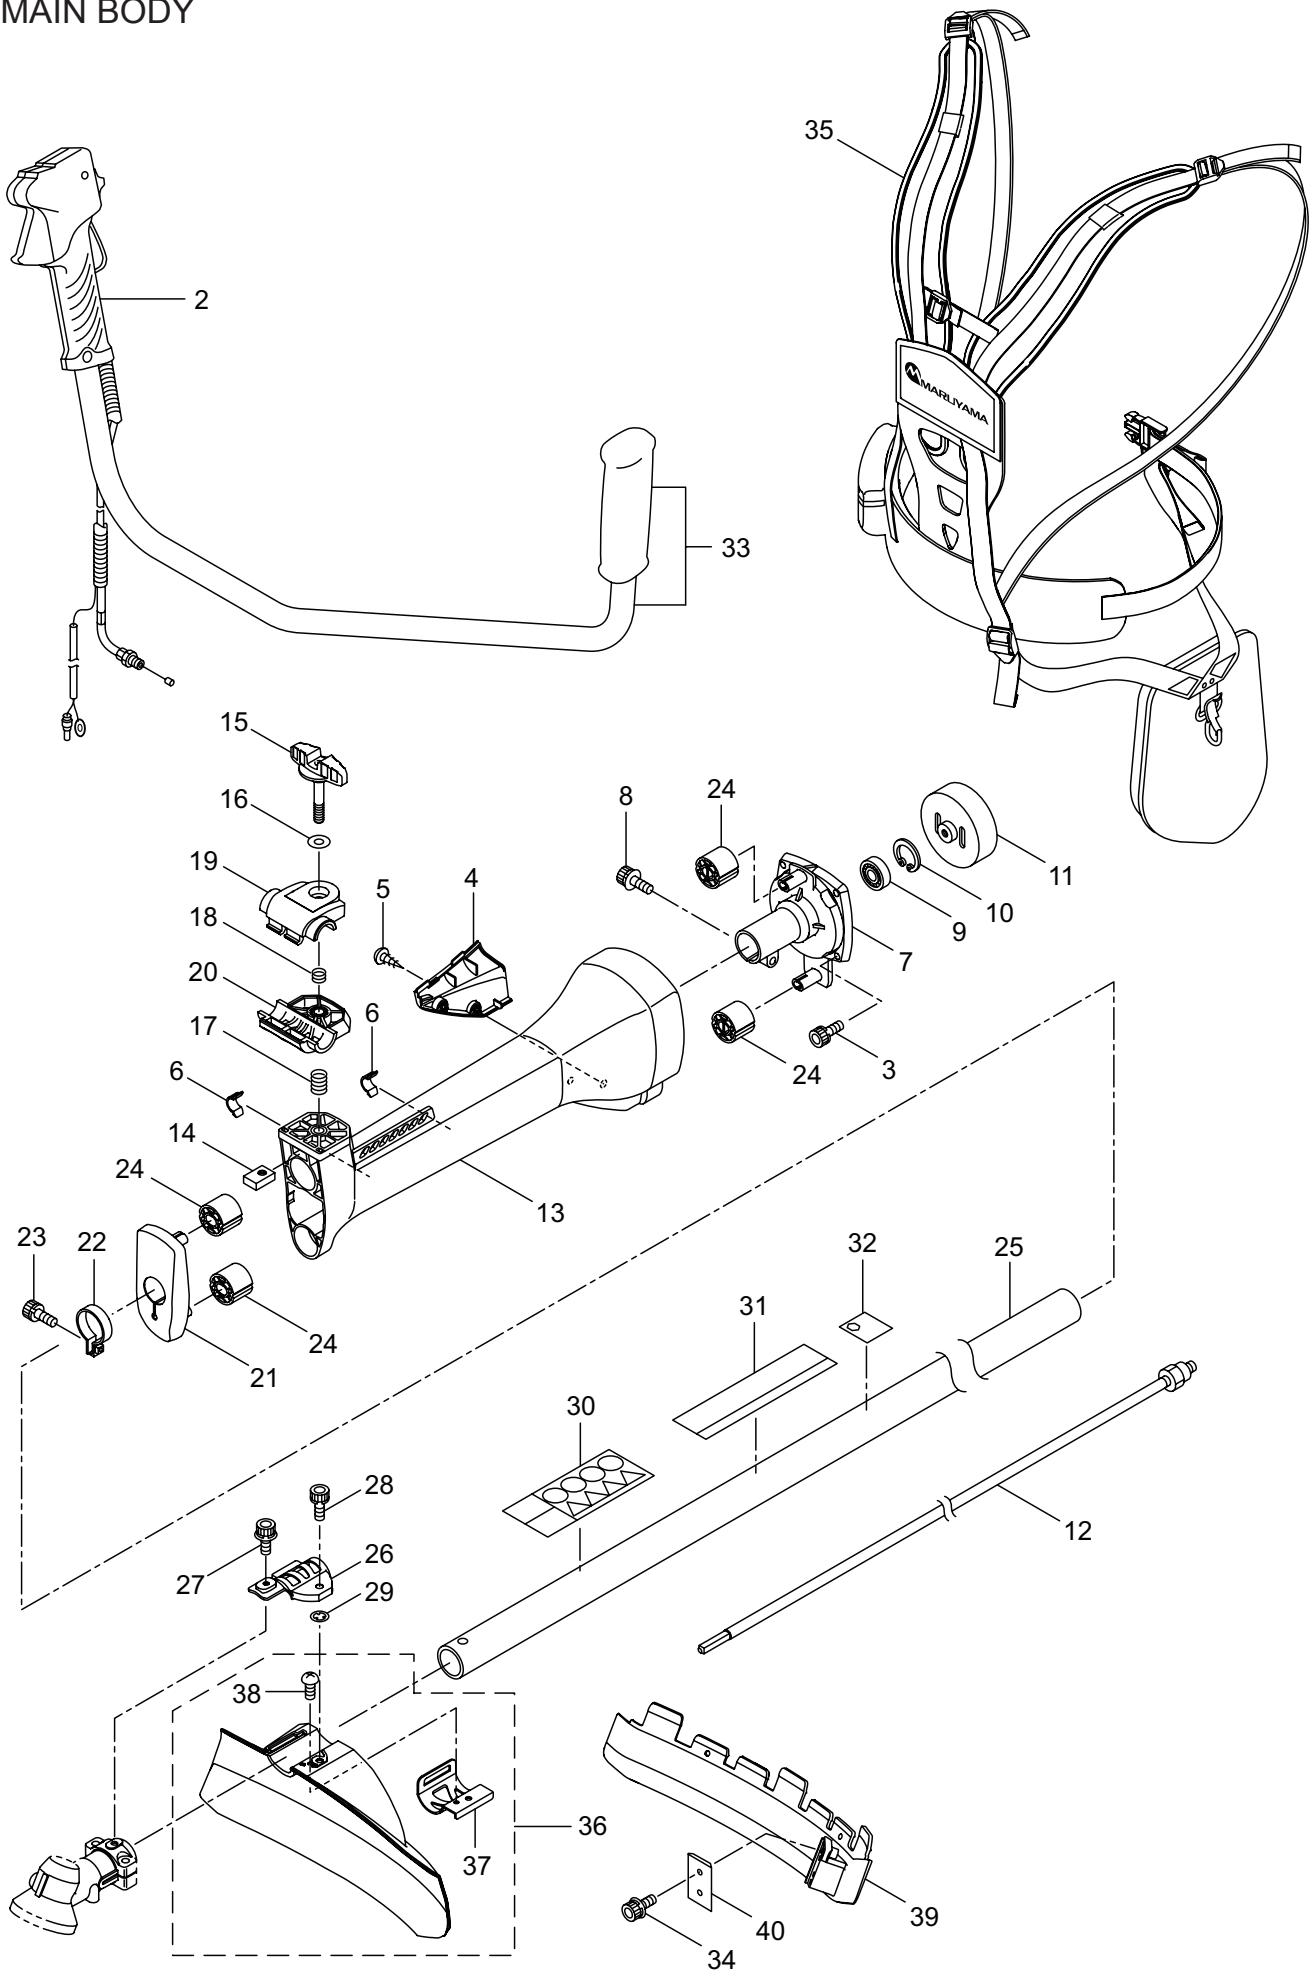


Ref. No.	Part No.	Part Name	Q'ty	Remarks
1-1	718557	BCV5020-01	1	
1-2	232908	Throttle Trigger	1	
1-3	219113	Cap Screw	4	M6x20
1-4	231909	Cover	1	
1-5	280144	Tapping Screw	2	
1-6	231910	Clip	2	
1-7	231920	Clutch Case	1	
1-8	217138	Bolt	1	M6x25
1-9	140474	Bearing	1	#620ZZ
1-10	012380	Snap Ring	1	#35
1-11	230704	Clutch Drum Comp	1	78xM8
1-12	230703	Driveshaft	1	8x1572L
1-13	231906	Body	1	
1-14	231911	Nut	1	M8 17x25x8
1-15	231912	Knob	1	
1-16	127216	Washer	1	M8
1-17	231913	Spring	1	15.6x25.5L
1-18	231914	Spring	1	13.8x15L
1-19	231915	Bracket A	1	
1-20	231916	Bracket B	1	
1-21	231917	Bracket	1	
1-22	231918	Band	1	t2.0
1-23	219113	Cap Screw	1	M6x20
1-24	231919	Bushing	4	
1-25	231923	Driveshaft Tube	1	
1-26	231997	Plate	1	
1-27	261607	Cap Screw	1	M5x16
1-28	271437	Screw	1	M6x20
1-29	231704	Washer	1	6x13xt1.0
1-30	223188	Label	1	
1-31	234590	Label	1	BCV5020
1-32	225382	Label	1	
1-33	234635	Handle Ass'y	1	
1-34	232689	Screw	2	M5x16
1-35	234477	Hanging Strap Ass'y	1	
1-36	234593	Safety Cover Ass'y	1	Incl.37,38
1-37	231993	Plate	1	
1-38	233364	Screw	1	4x8
1-39	231989	Cover Extention	1	
1-40	230747	String Cutter	1	

2. BCV5020-01
GEARCASE

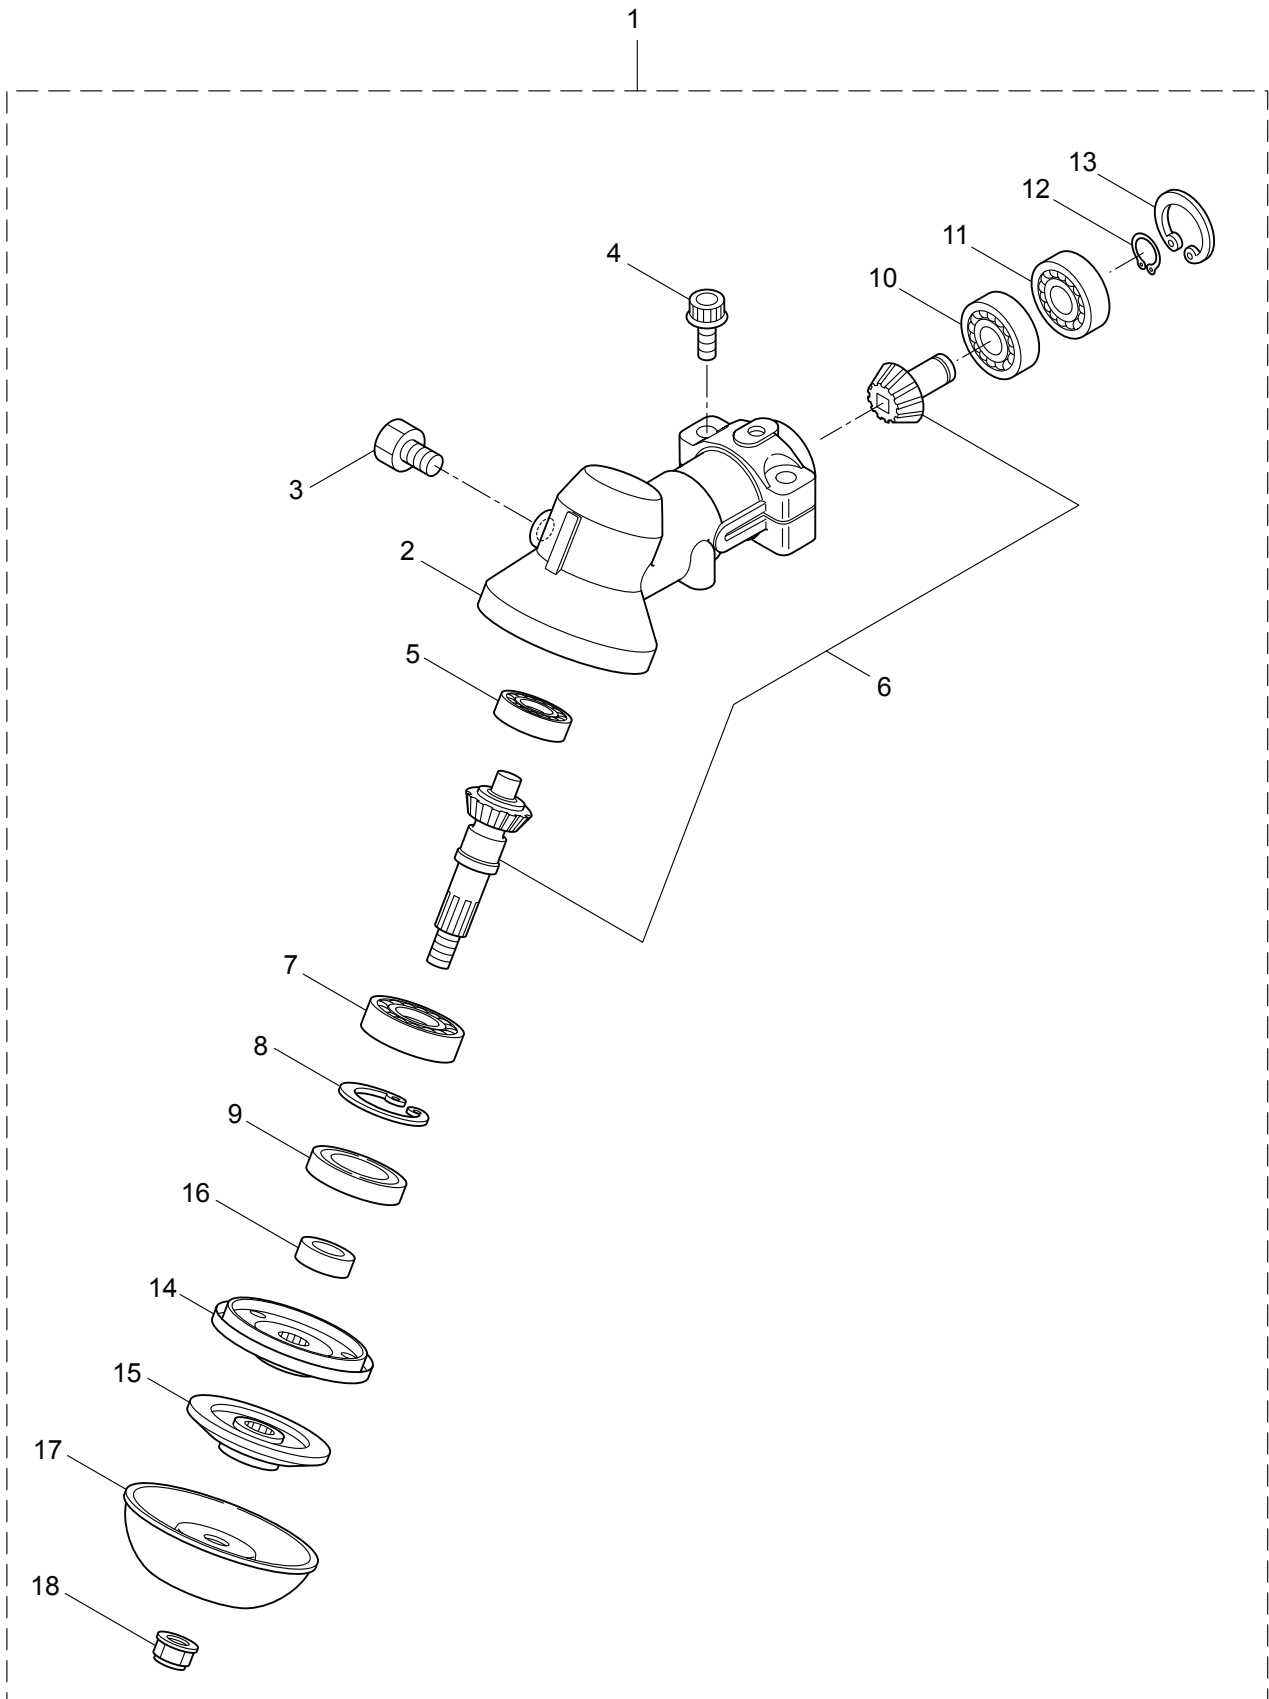


Ref. No.	Part No.	Part Name	Q'ty	Remarks
2-1	232060	Gearcase Ass'y	1	Incl.2-18
2-2	232045	Gearcase	1	
2-3	234109	Bolt	1	M8x8
2-4	232059	Cap Screw	2	M6x25
2-5	014490	Bearing	1	#6000
2-6	234833	Gear Set	1	
2-7	012544	Bearing	1	#6202
2-8	012380	Snap Ring	1	#35
2-9	232049	Oil Seal	1	D21355
2-10	014490	Bearing	1	#6000
2-11	106933	Bearing	1	#6000Z
2-12	014210	Snap Ring	1	#10
2-13	054676	Snap Ring	1	#26
2-14	234508	Bracket A Ass'y	1	
2-15	234509	Bracket B	1	
2-16	234510	Collar	1	15x21x8
2-17	232053	Stabilizer	1	
2-18	232061	Blade Locking Nut	1	M12x1.25

3. BCV5020-01
ENGINE

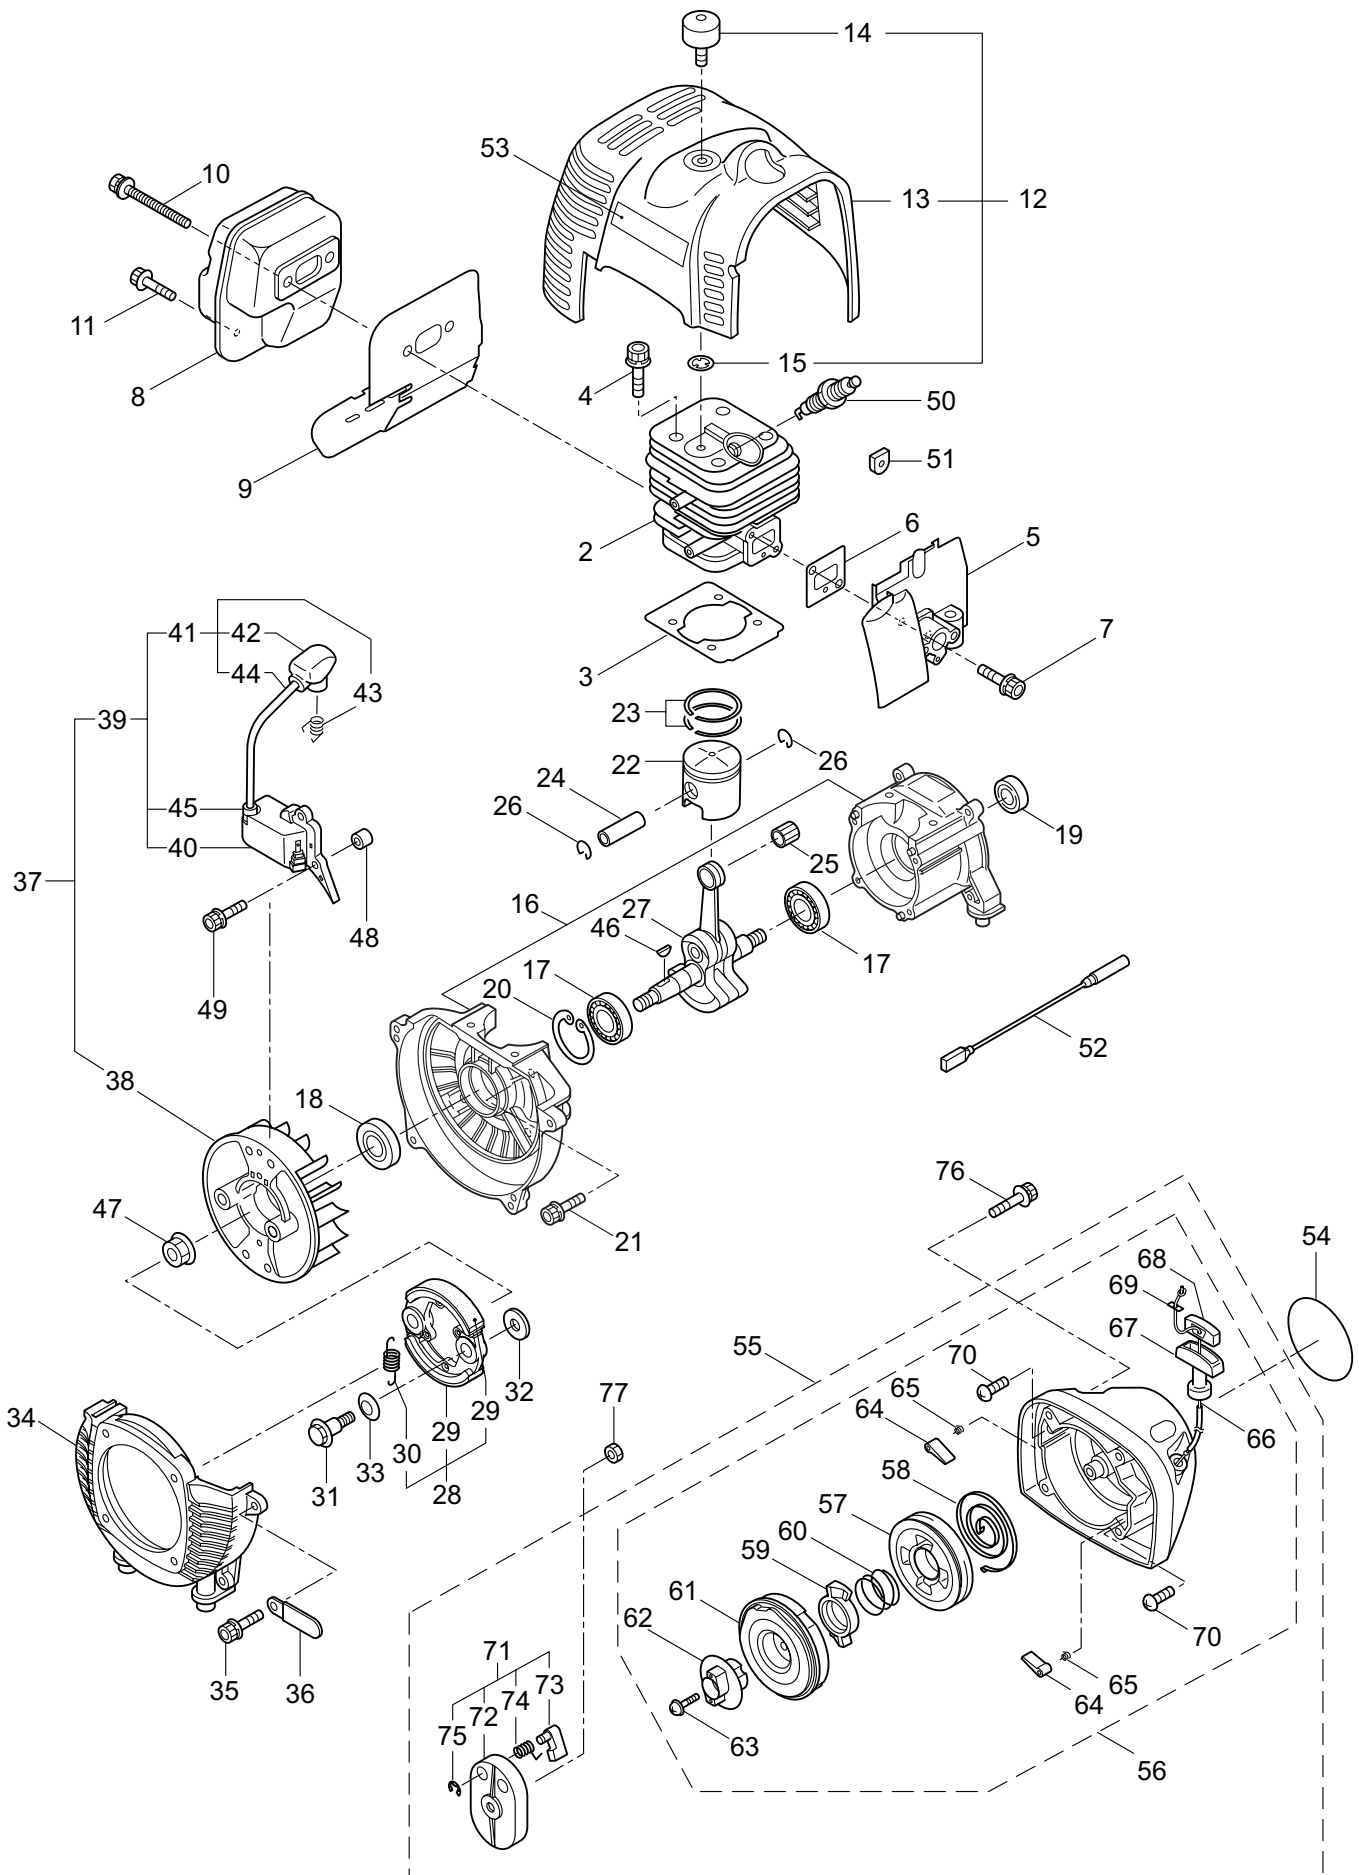


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-1	859173	Engine	1	NE500/39
3-2	283076	Cylinder	1	New gasket required
3-3	282259	Gasket	1	
3-4	261612	Cap Screw	4	M5x30
3-5	282261	Insulator	1	New gasket required
3-6	286715	Gasket	1	
3-7	267290	Cap Screw	2	M5x20
3-8	282264	Muffler Comp	1	
3-9	282271	Gasket	1	
3-10	266713	Cap Screw	2	M5x60
3-11	283315	Screw	1	M5x12W-12
3-12	286390	Top Cover Ass'y	1	Incl.13-15
3-13	282274	Top Cover	1	
3-14	285843	Knob	1	
3-15	286362	Washer	1	M6
3-16	282277	Crankcase	1	
3-17	262658	Bearing	2	#6202C3
3-18	262660	Oil Seal	1	TC15357
3-19	262565	Oil Seal	1	ISCD15257
3-20	012380	Snap Ring	1	#35
3-21	261612	Cap Screw	4	M5x30
3-22	283675	Piston	1	
3-23	282941	Piston Ring	2	(2)Required
3-24	262749	Piston Pin	1	
3-25	262659	Bearing,Needle	1	KTV111414EG01B2
3-26	262479	Clip,Piston Pin	2	
3-27	283038	Crankshaft/Conn.Rod Ass'y	1	
3-28	286905	Clutch Ass'y	1	Incl.29,30
3-29	286906	Clutch Shoe	2	(2)Required
3-30	286907	Spring, Clutch	1	
3-31	287092	Cap Screw	2	M8x1.25
3-32	262683	Washer	2	8x22xt1.2
3-33	262682	Wave Washer	2	
3-34	287145	Fan Cover	1	
3-35	261250	Cap Screw	4	M5x20
3-36	287245	Clamp	1	
3-37	287792	Magneto Ass'y	1	Incl.38-45
3-38	287793	Rotor/Fan	1	
3-39	287794	Ignition Coil Ass'y	1	Incl.40-45
3-40	287795	Coil	1	
3-41	282290	Spark Plug Wire Ass'y	1	Incl.42-44
3-42	282292	Plug Boot	1	
3-43	261075	Connector	1	
3-44	282291	Spark Plug Wire	1	
3-45	261072	Cap	1	

3. BCV5020-01
ENGINE

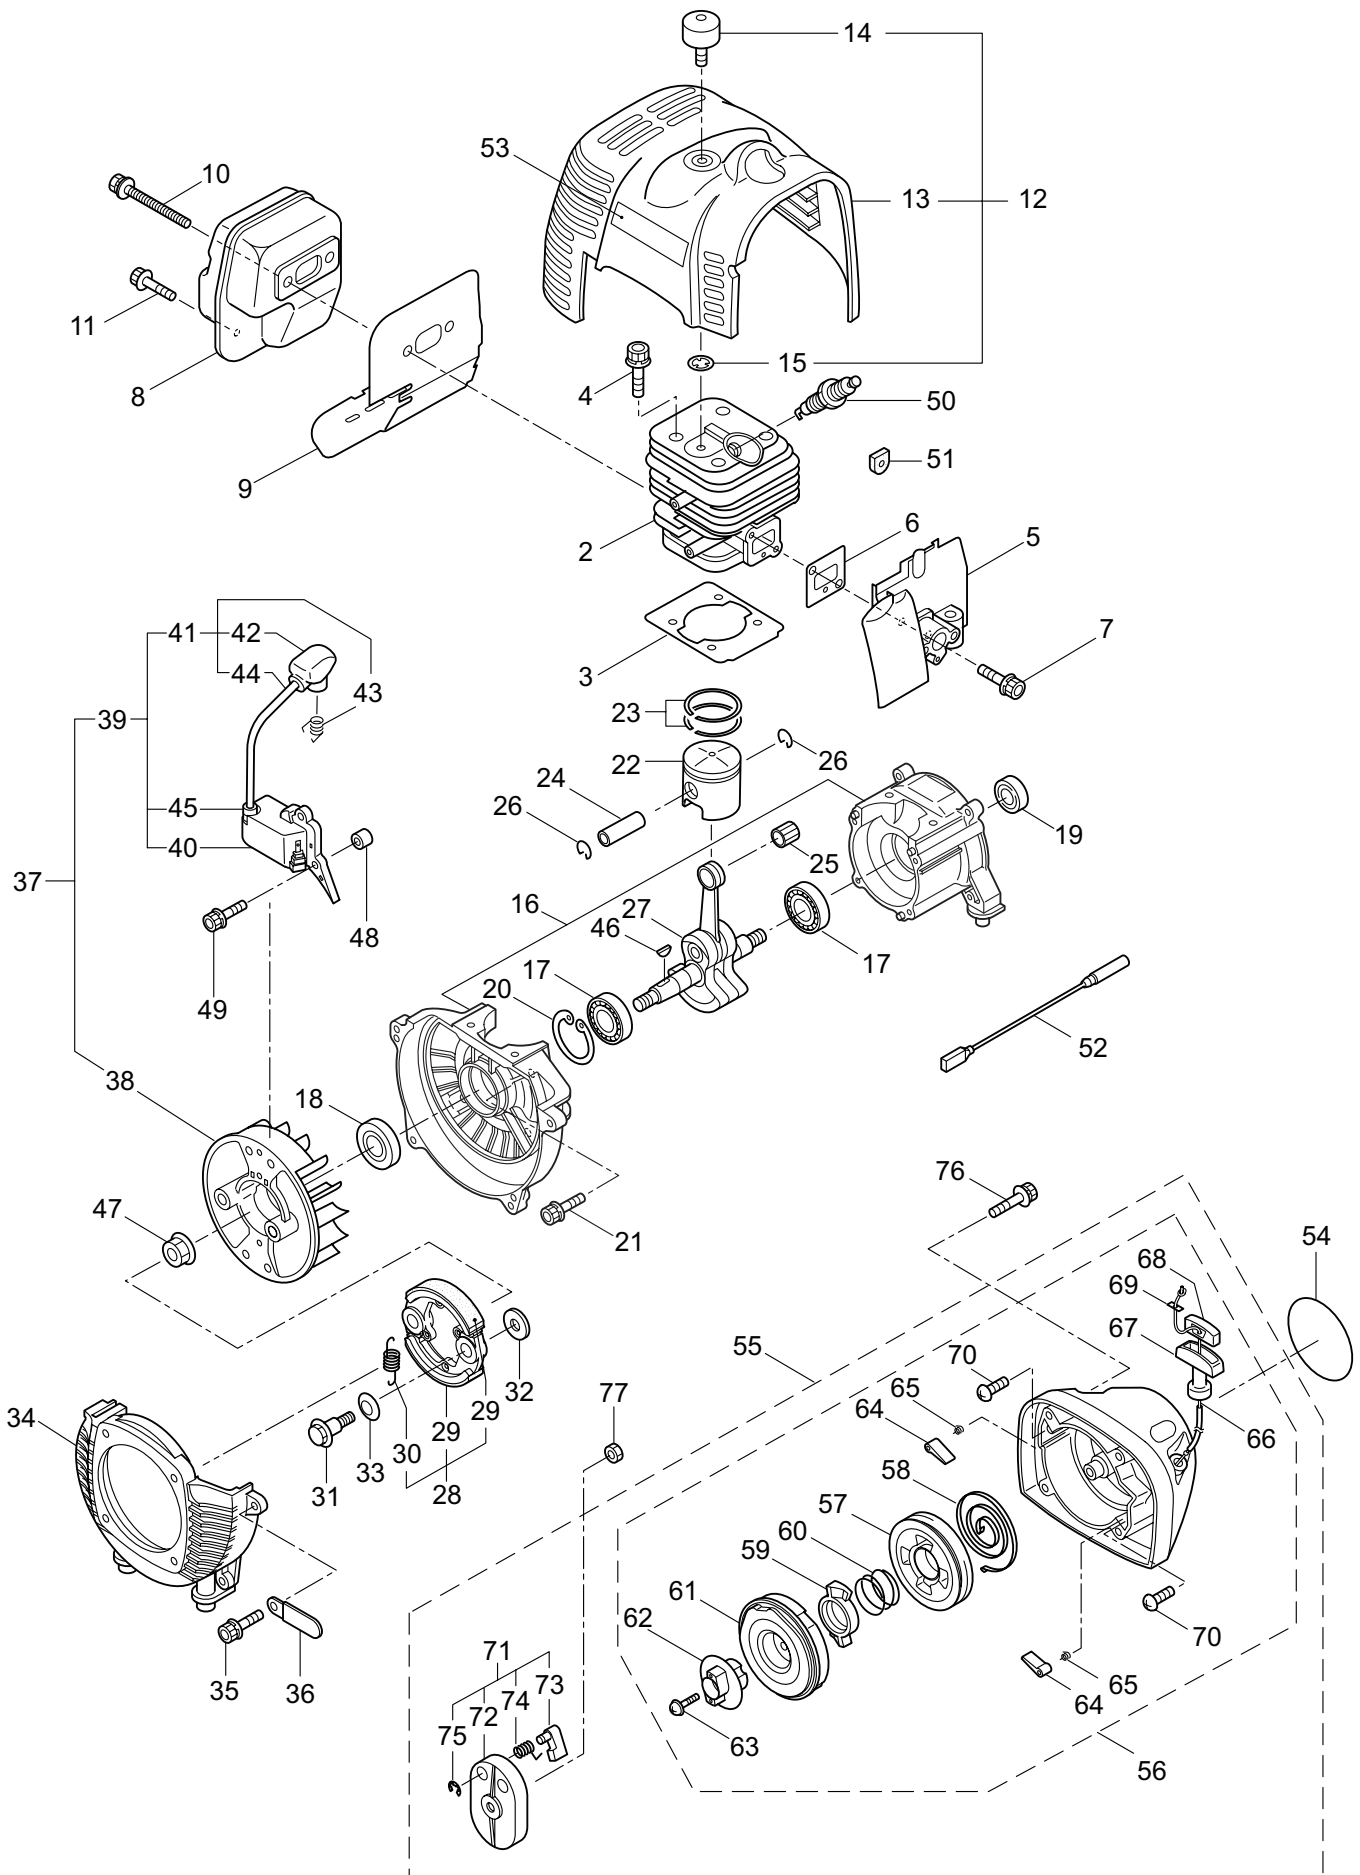


Ref. No.	Part No.	Part Name	Q'ty	Remarks
3-46	261076	Woodruff Key	1	3x10
3-47	262731	Nut,Rotor	1	M10
3-48	280381	Spacer	2	
3-49	283669	Cap Screw	2	M4x25
3-50	262483	Spark Plug	1	NGK BPMR6Y
3-51	281172	Grommet	1	
3-52	263804	Lead	1	
3-53	265694	Label	1	
3-54	289789	Label	1	
3-55	287917	Recoil Starter Ass'y	1	Incl.56-75
3-56	287918	Starter Ass'y	1	Incl.57-70
3-57	280994	Pulley	1	
3-58	280995	Spiral Spring	1	
3-59	280996	Pawl	1	
3-60	280997	Return Spring	1	
3-61	283123	Spring Comp	1	
3-62	280999	Plate	1	
3-63	281000	Set Screw	1	
3-64	281001	Pawl	2	
3-65	281002	Return Spring	2	
3-66	281004	Starter Rope	1	
3-67	262633	Starter Grip	1	
3-68	262981	Cap	1	
3-69	281005	Rope Stopper	1	
3-70	282622	Screw	2	
3-71	282623	Starter Pulley Ass'y	1	Incl.72-75
3-72	282282	Starter Pulley	1	
3-73	262636	Pawl	2	
3-74	262637	Return Spring	2	
3-75	262638	E-Ring	2	
3-76	261607	Cap Screw	4	M5x16
3-77	126990	Nut	1	M8

4. BCV5020-01
CARBURETOR, FUEL TANK

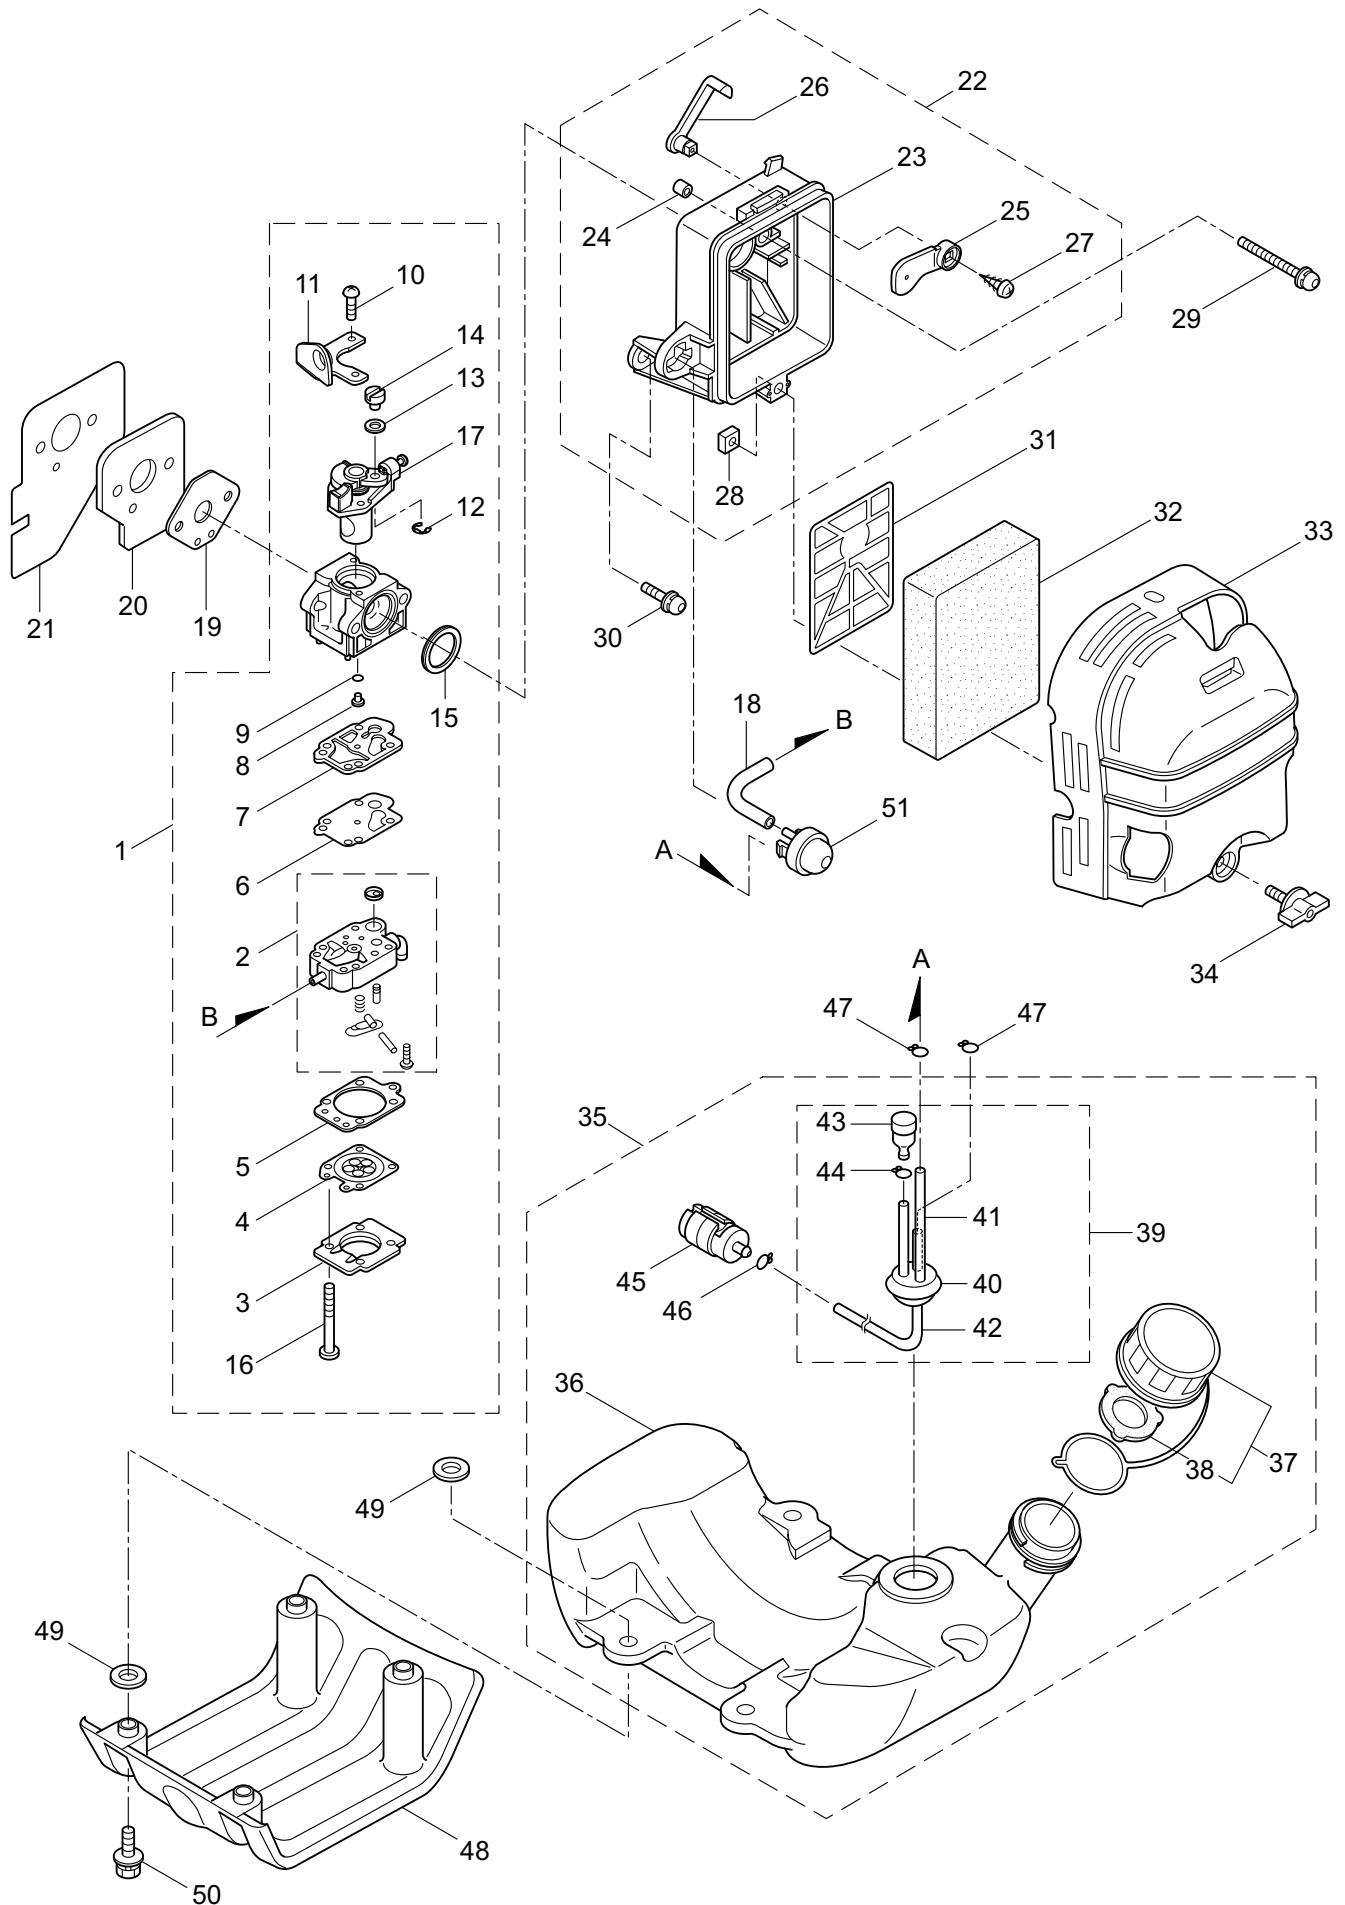











Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-1	289725	Carburetor Ass'y	1	Incl.2-17 New gasket required
4-2	283124	Pump Body	1	
4-3	263726	Cover Plate	1	
4-4	283905	Diaphragm, Meterring	1	
4-5	263727	Gasket	1	
4-6	262994	Diaphragm,Fuel Pump	1	
4-7	282576	Gasket	1	
4-8	287061	Main Jet	1	
4-9	261871	O-Ring	1	
4-10	261875	Screw	2	
4-11	264677	Bracket	1	
4-12	261876	E-Ring	1	
4-13	264678	Washer	1	
4-14	261658	Swivel	1	
4-15	261657	Packing	1	
4-16	263737	Screw	4	
4-17	287728	Throttle Valve	1	
4-18	282512	Fuel Pipe	1	
4-19	282301	Gasket	1	
4-20	283086	Divider	1	
4-21	283087	Gasket	1	
4-22	282302	Case Ass'y	1	Incl.23-28
4-23	282303	Case Body	1	
4-24	282484	Sleeve	3	
4-25	282304	Valve	1	
4-26	282305	Lever	1	
4-27	269032	Screw	1	
4-28	269423	Nut	1	
4-29	262720	Cap Screw	2	M5x55
4-30	264807	Cap Screw	1	M5x16
4-31	282481	Plate	1	
4-32	282306	Element	1	
4-33	282307	Cleaner Cover	1	
4-34	281438	Knob	1	
4-35	282309	Fuel Tank Ass'y	1	Incl.36-46
4-36	282310	Fuel Tank	1	
4-37	281564	Fuel Tank Cap Ass'y	1	Incl.38
4-38	269377	Gasket	1	
4-39	282312	Fuel Pipe Ass'y	1	Incl.40-44
4-40	268065	Grommet	1	
4-41	282511	Return Pipe	1	
4-42	262649	Fuel Pipe	1	
4-43	261590	Breather	1	
4-44	261117	Clip	1	
4-45	267328	Fuel Filter Ass'y	1	

4. BCV5020-01
 CARBURETOR, FUEL TANK

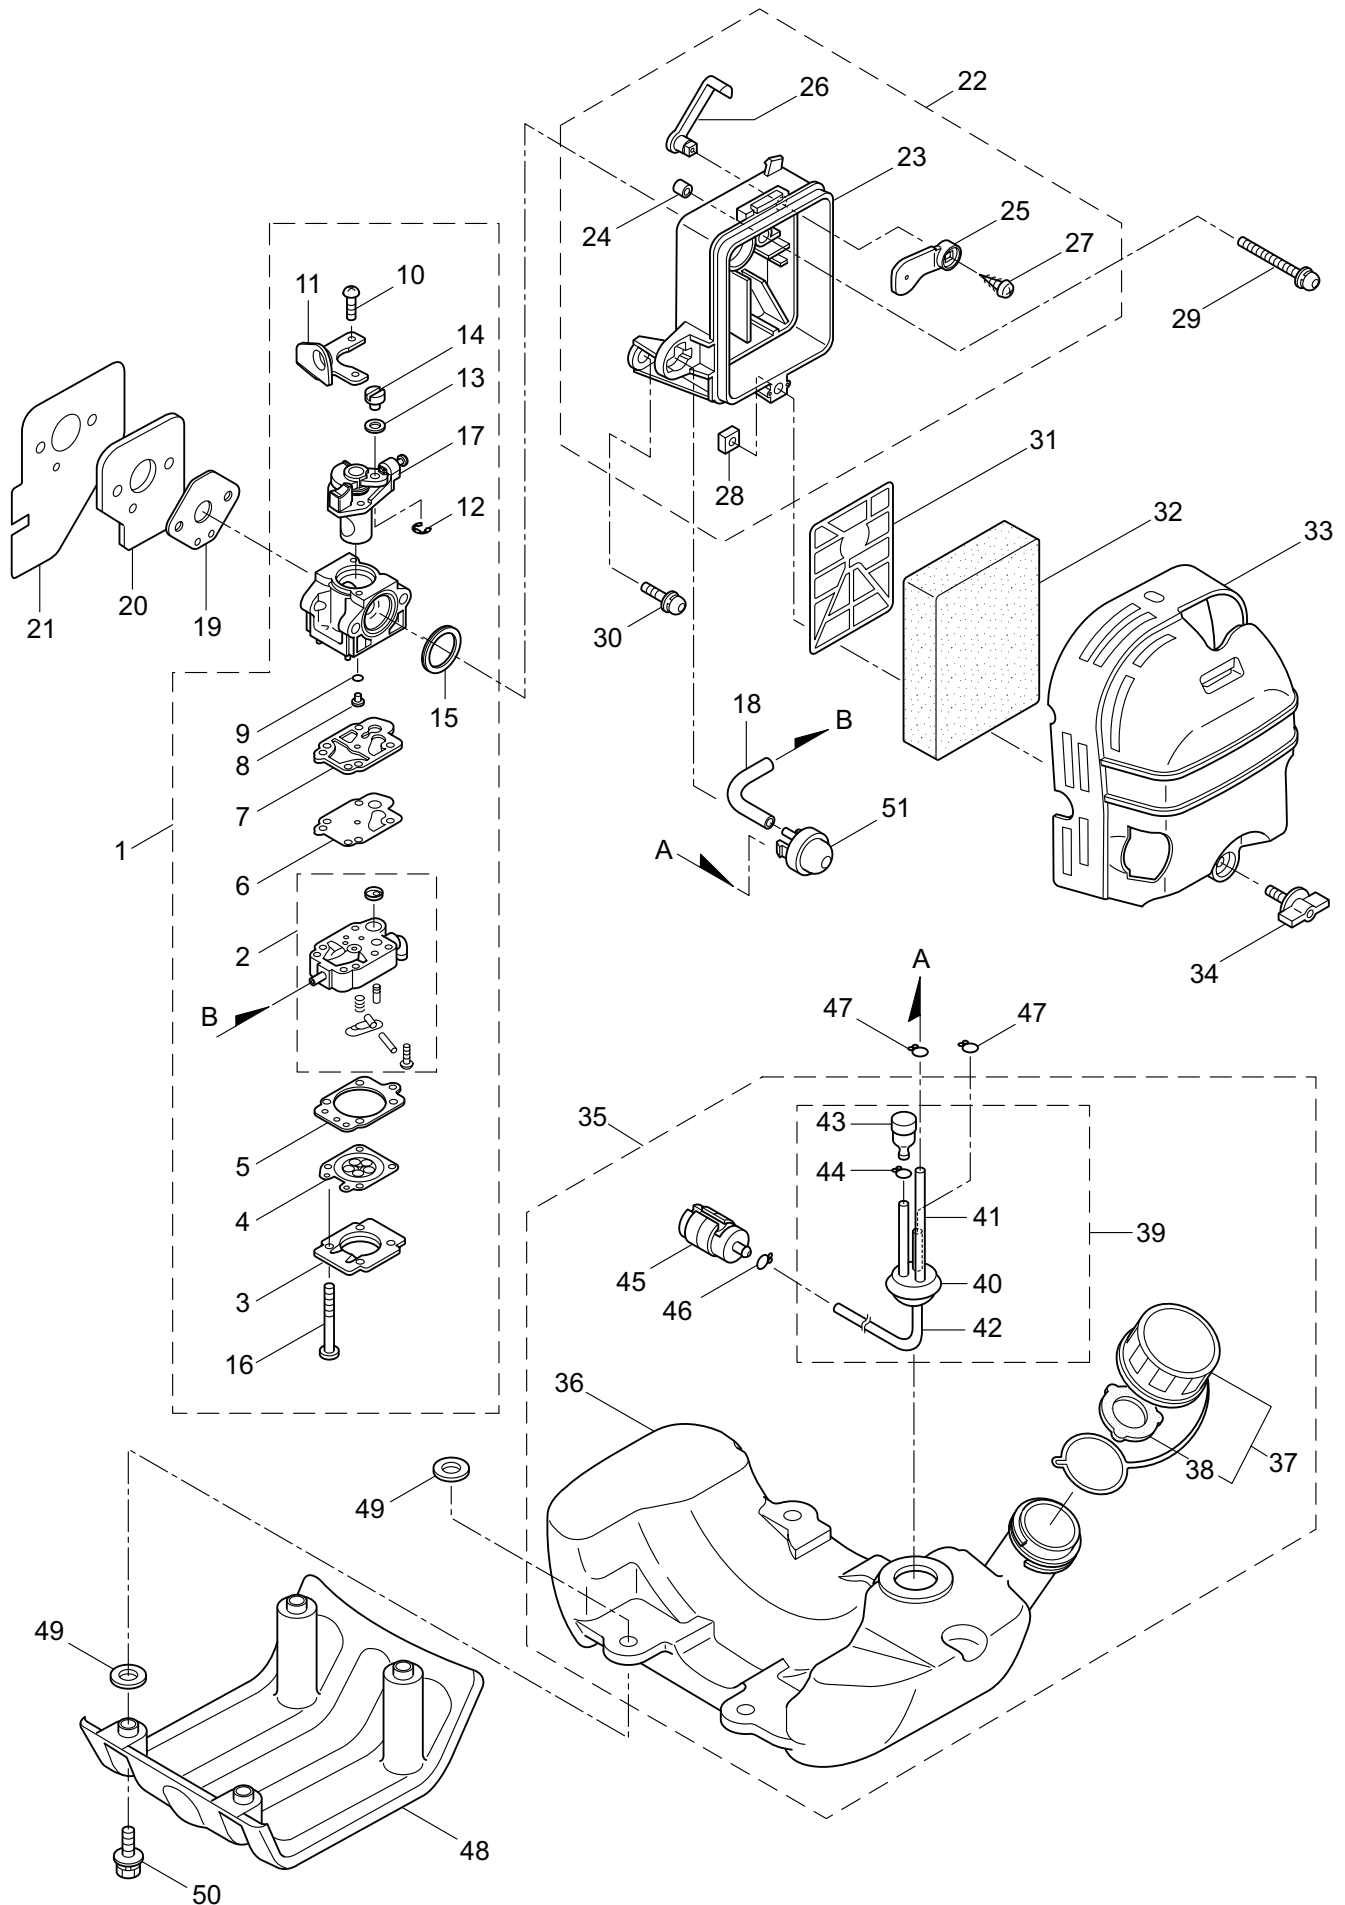

Ref. No.	Part No.	Part Name	Q'ty	Remarks
4-46	261117	Clip	1	
4-47	261117	Clip	2	
4-48	289788	Stand	1	
4-49	285735	Packing	8	
4-50	281714	Cap Screw	4	M5x20
4-51	282299	Pump	1	

5. BCV5020-01
ACCESSORIES

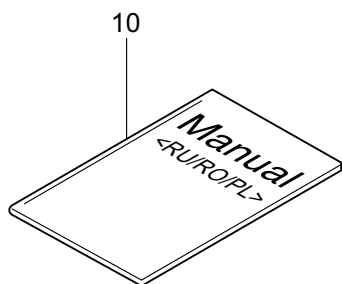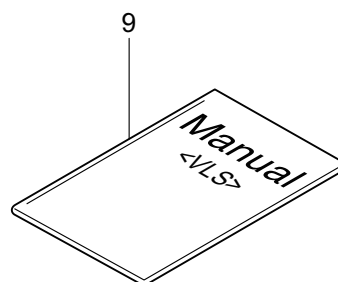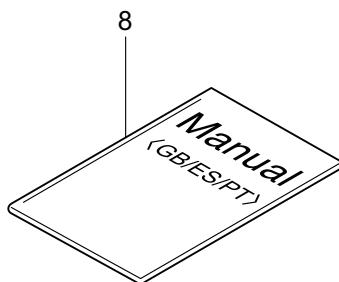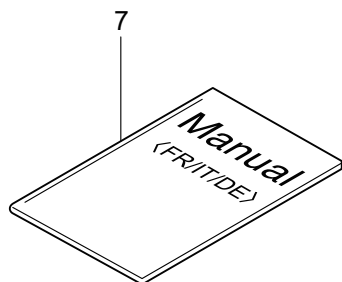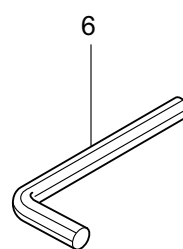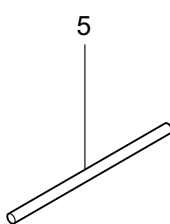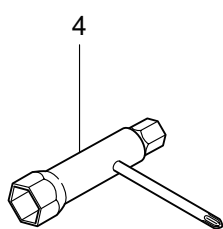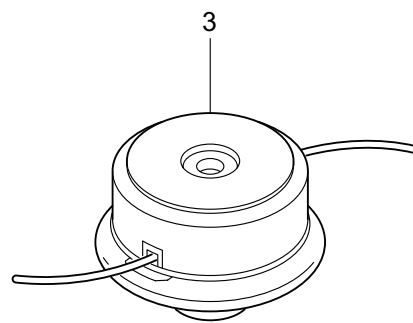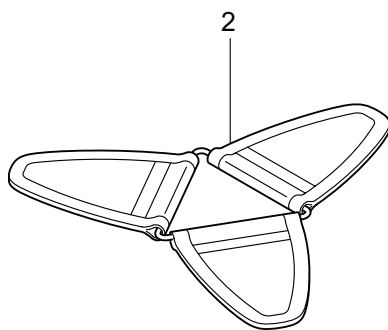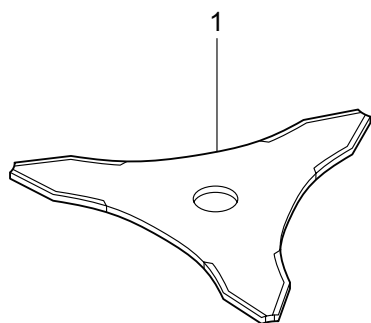

Ref. No.	Part No.	Part Name	Q'ty	Remarks
5-1	232905	Mowing Blade	1	305x25.4xt3
5-2	232907	Blade Cover	1	
5-3	232906	Semi-Auto Head (L)	1	
5-4	234586	Box Spanner	1	19x17x(+)
5-5	212300	Lever Handle	1	6X100L
5-6	219433	Wrench	1	5mm
5-7	234591	Instruction Manual	1	FR/IT/DE
5-8	234630	Instruction Manual	1	GB/ES/PT
5-9	235681	Instruction Manual	1	VLS
5-10	235922	Instruction Manual	1	RU/RO/PL