Is Your Product Registered? Contact your Dealer to verify. Warranties are based on Registrations and reduced to 1 year without Registration.



301 – 30th Street NE, Suite 118, Auburn, WA 98002 PO Box 309, Auburn, WA 98071-0309 Phone (253) 735-7368 Fax (253) 735-1416

ILLUSTRATED PARTS LIST

MODEL MS045 MODEL MS045D

BACKPACK SPRAYER


Effective 1-4-93



Maruyama — Manufacturing quality agricultural sprayers and equipment since 1895.

500 - 6/94


Pt. #840141

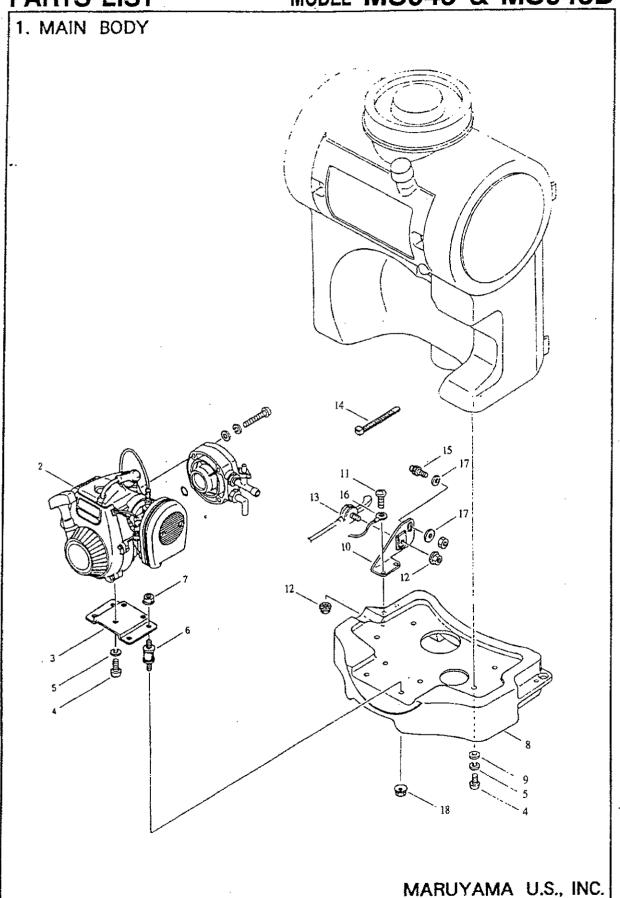

Ref. No.	Parts No.	Parts Name	Q'ty	Ref. No.	Parts No.	Parts Name	Q'
1-1	323397	MS045D	ļ				
	323358	MS045	1				
1-2	111151	Engine (TF022H - AG22)	1				
	107367	Engine (KT12X) (MS045)	1				
1-3	106319	Bracket	1				
1-4	081454	Screw (M6x14)	7				
1-5	012502	Spring Washer (M6)	7			,	
1-6	100573	Buffer	4				
1-7	100420	Nut (M6)	4				
1-8	106334	Base	1				
1-9	019056	Washer (6.5x18xt1)	4				
1-10	103156	Stay	1				
1-11	081415	Screw (M5x0.8x16)	2				İ
1-12	103549	Nut (M5x0.8)	3				
1-13	102377	Throttle Lever	1				
1-14	105337	Band	2				
1-15	101110	Stop Button	1				
l-16	102380	Earth Cord	1				
1-17	012489	Washer (M8)	2				
1-18	109704	Nut (M6)	4				
					, ,		


:

MODEL MS045 & MS045D

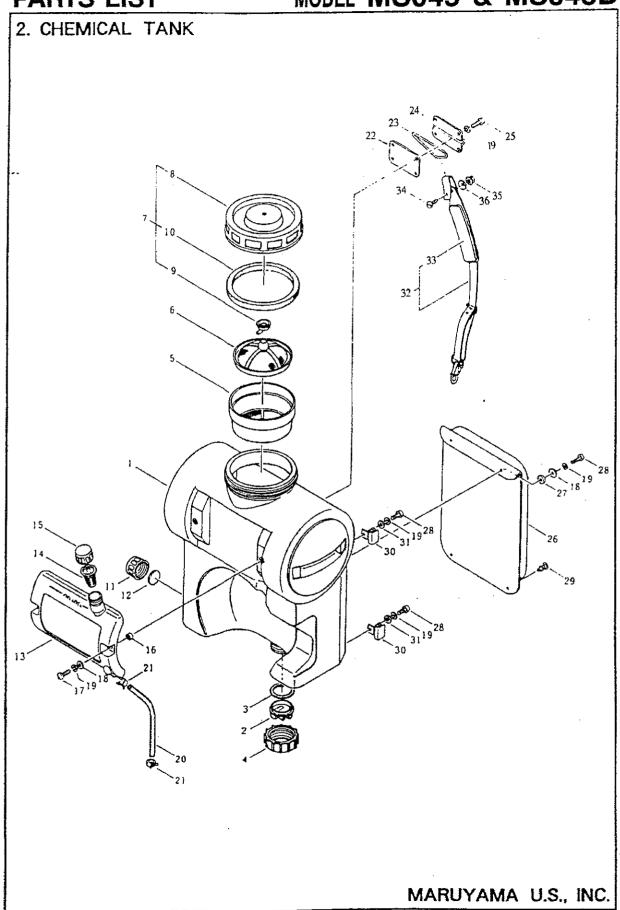


Ref.No	Paris No	Parts Name	Q'ty	Ref.No.	Parts No.	Parts	Name		Qʻty
2-1	106327	Chemical tank	1						
2-2	106329	Connector	1						
· Z-3	107176	Packing (φ 50 × φ 60 × t3)	1						
2-4	100466	Сар	1						
2-5	106330	Strainer	1						
2-6	102623	Strainer	1						
2-7	106331	Cap, chemical tank, ass'y	1						
2-8	106332	· Cap, Chemical tank	1		-				
2-9	022363	• Inner cap	1		1				
2-10	022362	• Packing (\$\phi\$ 150 \times \$\phi\$ 170 \times 110)	1		. [
2-11	 	Blind cap	1						
2-12	029299	Blind packing (\$\phi 36 \times t3)	1		•				
2-13	1	Fuel tank	1		ĺ			İ	
2-14	106920	Strainer	1						
2-15	028391	Сар	1	1					
2-16	106344	Collar	2				· · · · · · · · · · · · · · · · · · ·		7
2-17	081465	Screw (M6 × 18)	2						
2-18	019056	Washer $(\phi 6.5 \times \phi 18 \times t1)$	4		***************************************				
2-19		Spring washer (M6)	10						
2-20		Vinyl hose $(\phi 7 \times \phi 11 \times 125L)$							\dashv
1		Hose band (#10)	2					-	
1	106349		1		1				
	i	Strap hook	1		İ			.	
- 1	106350		$ \cdot $					ļ	
2-25	081452	Screw (M6 × 10)	4						- 1
		Cushion pad	1						一
i	!	Packing (\$\phi 5.5 \times \phi 16 \times 11.5)	2					1	
- 1		Screw (M6 × 12)	4						
2-29	101863	Fastener	2						
2-30	106353	Clip	2						
2-31	013754	Washer (M6)	2						コ
2-32	108466	Knapsack strap, ass'y	2						
2-33	019874	Shoulder pad	2					1	
2-34	020654	Bolt (M6)	2						
	1	Nut (M6)	2						
		Washer (M6)	2					-	7

	1							1	
		•			- 1			- 1	- 1

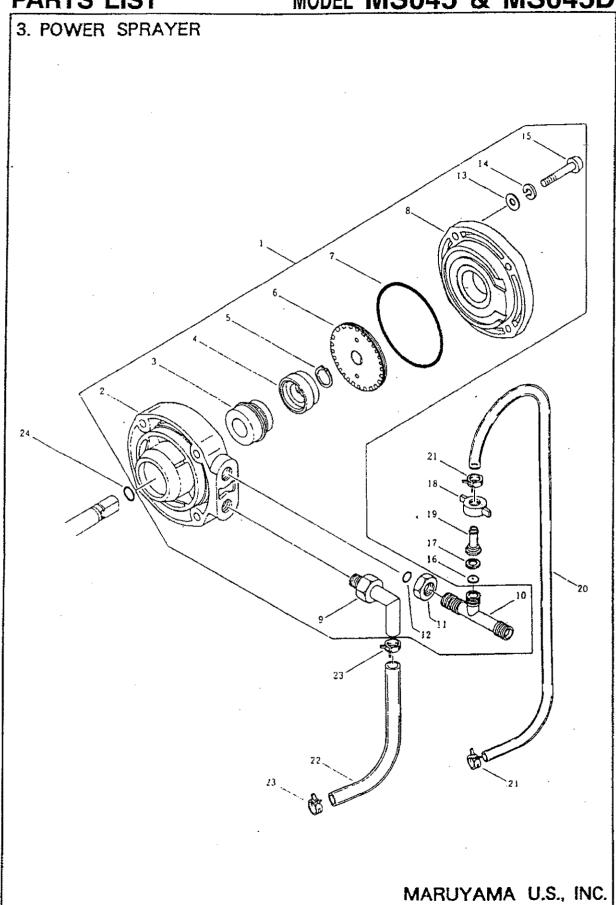


Ref.No.	Parts No.	Parts Name	Q'ty	Ref.No.	Parts No.	Parts	Name	Q'ty
3-1	106320	Pump, ass'y	1					
3-2	106275	• Casing	1]]				
3-3	107421	Mechanical seal	1					
3-4	107201	• Holder	1					
3-5	106323	-C-shaped snap ring (S12)	1					
3-6	107202	· Impeller (57x3.57x12)	1					
3-7	014033	• O-ring (S67)	1					
3-8	106276	Casing cover	1			***************************************		
3-9	106325	• Elbow (PT1/4)	i					
3-10	106326	•T-joint (PF1/4)	1					
3-11	025604	• Nut (PF1/4)	ì					
3-12	011343	•O-ring (P10A)	1					
3-13	065005	• Washer (M6)	4					
3-14	105849	• Spring washer (M6)	4					
3-15	088348	• Screw (M6 × 45)	4					
3-16	100704	Nozzle plate (ϕ 1.0× ϕ 8.2×t1)	1					
3-17	100703	Packing $(\phi 6 \times \phi 11.5 \times t2.5)$	1					
3-18	023266	Hose coupling (F) (PF1/4)	1					
3-19	106346	Inner core	1					
3-20	106347	Vinyl hose $(\phi 5 \times \phi 8 \times 400L)$	1					
3-21	106348	Hose band (#4)	2		Ì			
3-22	105336	Vinyl hose (ϕ 10× ϕ 15×180L)	1	1				
3-23	103033	Hose band (#27)	2					
3-24	013963	O-ring (S10)	1					
							· · · · · · · · · · · · · · · · · · ·	
ĺ								
1								
				<u> </u>				-
	-	·						
		· · · .			***************************************			
	İ				ĺ			
	1							


-

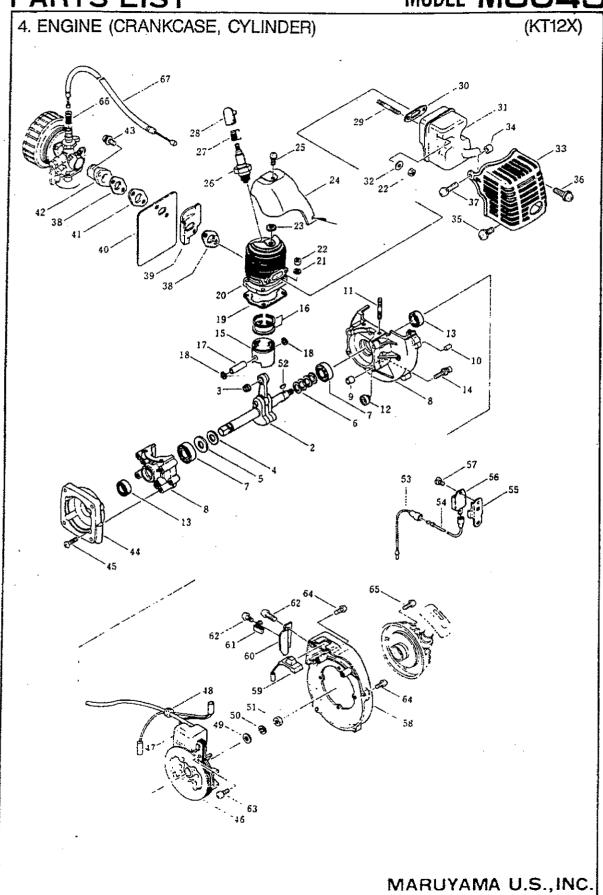

Ref.No	Purts No.	Parts Name	Q'ty	Ref. No.	Parts No.	Parts Name	Q'ty
	102267	F (VT-OV)	-	 			
4-1	107367 944788		1	4-38	943170	Gasket Cylinder cover	2
4-2	943597	,	1	4-39 4-40	944101	Gasket	
4-4	911322		1	4-41	943992	1	1
4-5	911323		1	4-42	943169		1
4-6	911320		AR	4-43	943978	Screw	2
4-6	943128	1	AR	4-44	943650	Case	1
4-6	943129	Shim (t0.4)	AR	4-45	943575	Screw	4
4-6	943130	1	AR	4-46	944583	Flywheel	
4-7	944111	Ball bearing (6001V3)	2	4-47	944584	Ignition coil	1
4-8	944789	Crankcase, ass'y	1	4-48	943994	Grommet	1
4-9	071098	Dowel pin	2	4-49	901564	Washer	
410	071100	. Dowel pin	2	4-50	943142	Spring washer	1
4-11	071554	. Stud	4	4-51	943173	Nut	1
4-12	944790	Damper	1	4-52	071090	Key	1
4-13	911325	Oil seal	2	4-53	943998	Lead wire	1
4-14	943190	Screw	4	4-54	944110	Lead wire	1
4-15	943580	Piston	1	4-55	944109	Bracket	1
4-16	073343	Piston ring set	1	4-56	944108	Igniter	1
4-17	943943	Piston pin	1	4-57	943894	Screw	1
4-18	943581	Snap ring	2	4-58	944793	Spiral case	1
4 19	943589	Gasket	j	4-59	943161	Stop switch	3
4-20	944582	Cylinder	1	4-60	943995	Cylinder cover	1
4-21	901518	Spring washer	4	4-61	944113	Clamp	1
4-22	943265	Nut	6	4-62	943458	Screw	2
4-23	943188	Gasket	7	4-63	943644	Screw	2
4-24	943197	Cylinder cover	_ i	4-64	943574	Screw	4
4-25	943987	Screw	,	4-65	944794	Screw	4
4-26	943643	Sperk plug (BM6)	1	4-66	944004	Spring	1
4-27	943771	Spring	1	4-67	944795	Throttle cable	1
4-28	943773	Plug cap	1				
4-29	943571	Stud	2	-			
4-30	943468	Gasket	1				
4-31	944791	Muffler, ass'y	1		ļ		
4-32	071104	Washer	2				
4-33	944585	Muffler cover	1	T	<u> </u>		
4-34	944586	Collar	1		:	,	
4-35	944792	Screw	1		:		
4-36	944125	Screw	1		1 4 5		
4-37	944126	Screw	1				

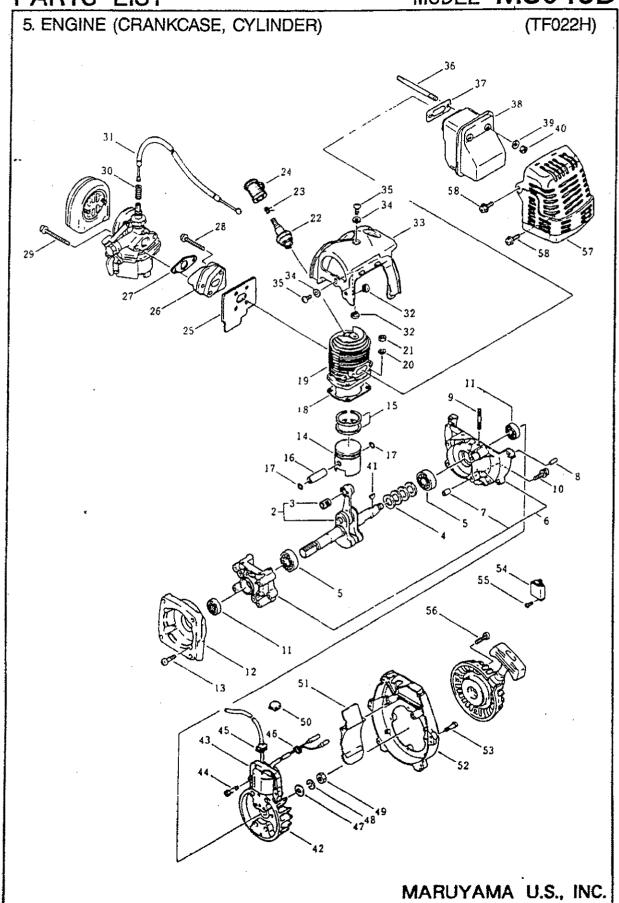


Ref.No.	Parts No.	Parts Name	Q'ty	Ref.No.	Parts No.	Parts Name	Q'ty
5-l	111151	Engine, ass'y (TF022H-AG22)	1	5-38	577352	Muffler, ass'y	1
5-2	577347	Crankshaft, ass'y	1	5-39	573952	Washer	2
`5-3	943597	• Needle bearing	ı	5-40	577353	Nut (M5)	2
5-4	911320	Shim (t = 0.1)	AR	5-41	071090	Key	1
5-4	943128	Shim (t = 0.2)	AR	5-42	573964	Flywheel	1
5-4	943129	Shim (5 = 0.4)	AR	5-43	573965	Ignition coil	1
5-4	943130	Shim $(t = 0.6)$	AR	5-44	943644	Bolt (M4 × 20)	2
5-5	944111	Ball bearing (6001V3)	2	5-45	573966	Grommet	1
5-6	577348	Crankcase, ass'y	1	5-46	943968	Grommet	1
5-7	573908	• Dowel pin	2	5-47	071190	Washer (M8)	1
5-8	071100	Dowel pin	2	5-48	071615	Spring washer (M8)	1
5-9	071099	Stud	4	5-49	943173	Nut (M8)	1
5-10	573179	Screw	4	5-50	573967	Grommet	1
5-11	573958	Oil seal	2	5-51	573985	Plate	1
5-12	577349	Flange	1	5-52	577354	Fan housing	1
5-13	573973	Screw (M5 × 16)	4	5-53	573986	Screw (M4 × 16)	4
5-14	573955	Piston	I	5-54	573079	Igniter	1
5-15	073343	Piston ring set	1	5-55	943579	Screw (M4 × 8)	1
5-16	943943	Piston pin	1	5-56	944794	Screw	4
5-17	943581	Snap ring	2	5-57	577355	Muffler protector	1
5-18	943589	Cylinder gasket	1	5-58	577356	Bolt	2
5-19	573948	Cylinder .	1				
5-20	071692	Spring washer (M5)	4				
5-21	944415	Nut (M5)	4				
5-22	571472	Spark plug (BM7A)	i		İ		
5-23	943771	Terminal	1				
5-24	943773	Plug cap	1				
5-25	573961	Gasket	1				
5-26	573960	Insulator	1		ĺ		
5-27	573962	Gasket	1				
5-28	572912	Screw (M5 × 20)	2		***************************************		
5-29	943738	Screw (M5 × 43)	2				
5-30	944004	Spring	1				·
5-31	944795	Throttle wire	1		-		
5-32	577350	Washer	2				
5-33	573984	Shroud	1				
5-34	573989	Washer $(\phi 4.5 \times \phi 10 \times t1.2)$	2				
5-35	573988	Screw (M4 × 16)	2				
5-36	577351	Stud	2				
5-37	573951	Gasket	1				

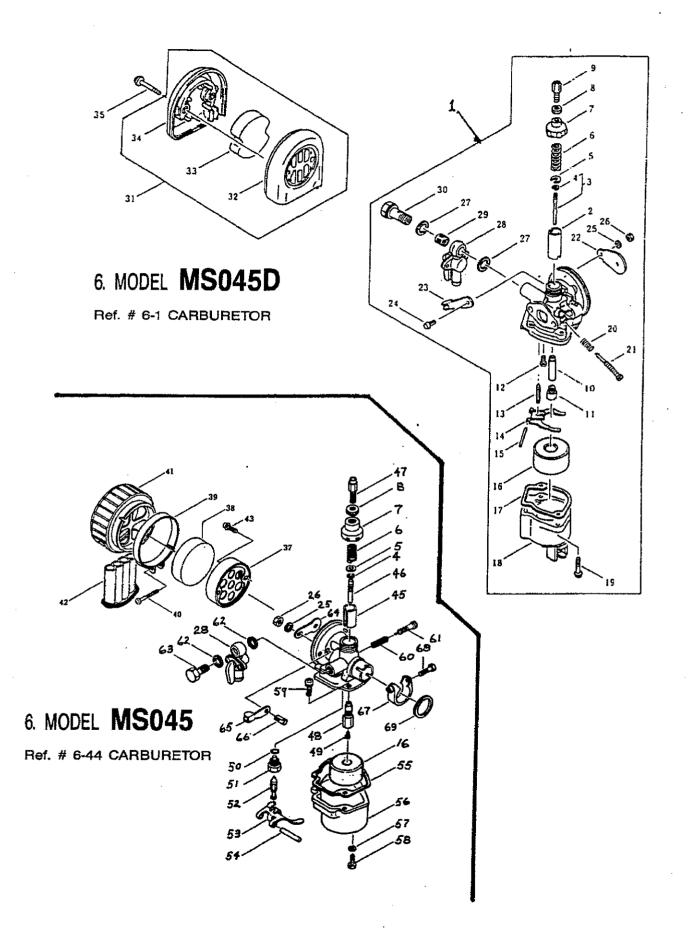

Ref. No.	Parts No.	Parts Name	Qʻty	Ref. No.	Parts No.	Parts Name	Q'ty
6-1	544357	Carburetor, ass'y	1	6-41	943591	Air cleaner cap	l
6-2	573994	Throttle valve	l	6-42	943592	Air duct	1
6-3	573993	· Jet needle	l	6-43	943577	Screw	2
6-4	071145	Snap ring	1	6-44	944796	Carburetor ass'y complete	l
6-5	943167	•Retainer valve	l	6-45	944588	Throttle valve	1
6-6	071253	Throttle spring	1	6-46	944107	Jet needle	1
- 6-7	071252	• Body cap	1	6-47	944096	Adjuster	1
6-8	071149	· Lock nut	1	6-48	943658	Needle jet	
6-9	573992	· Cable adjuster	l	6-49	943166	Main jet	
6-10	577358	• Needle jet	1	6-50	943656	O-ring	
6-11	577359	• Main jet (#50)	1	6-51	944103	Valve seat	
6-12	944322	·Screw (M3x6)	l	6-52	944090	Needle valve	
6-13	944320	• Needle valve	1	6-53	943277	Float lever	
6-14	573189	• Arm	I	6-54	943063	Float pin	
6-15	943512	• Hinge pin	1	6-55	943184	Gasket	
6-16	944106	• Float	1	6-56	944100	Float chamber	
6-17	944323	• Gasket	1	6-57	071131	Gasket	
6-18	944324	· Float chamber	l	6-58	071434	Drain screw	
6-19	943896	- Screw (M4x16)	2	6-59	943577	Screw	
6-20	943196	·Spring	1	6-60	943192	Spring	
6-21	944316	· Slow stop screw	1	6-61	943211	Idle stop screw	
6-22	944314	- Valve	1	6-62	944105	Gasket	
6-23	944478	· Choke lever	1	6-63	944097	Banjo bolt	
6-24	944313	• Bolt	1	6-64	944092	Choke valve	
6-25	944102	• Washer	1	6-65	944094	Choke lever	
6-26	071153	• Nut	1	6-66	071263	Bolt	
6-27	944482	• Gasket	2	6-67	944093	Body Band	
6-28	944104	· Fuel valve, ass'y	1	6-68	071259	Bolt	ŀ
6-29	944481	• Filter	1	6-69	944089	Gasket	
6-30	944480	· Eye bolt	1				
6-31	574002	Air cleaner, ass'y	1				
6-32	574003	· Air cleaner case	1				į
6-33	943483	- Air filter	i				
6-34	574004	· Air filter cap	1				
6-35	574005	Screw (M4x40)	2				
6-36	943590	Air Cleaner, ass'y	1				
6-37	943193	Air cleaner case	1 1				
6-38	943194	Element	1				
6-39	944797	Band	1 1				
6-40	944798	Screw-	1				


PARTS LIST MODEL MS045 & MS045D

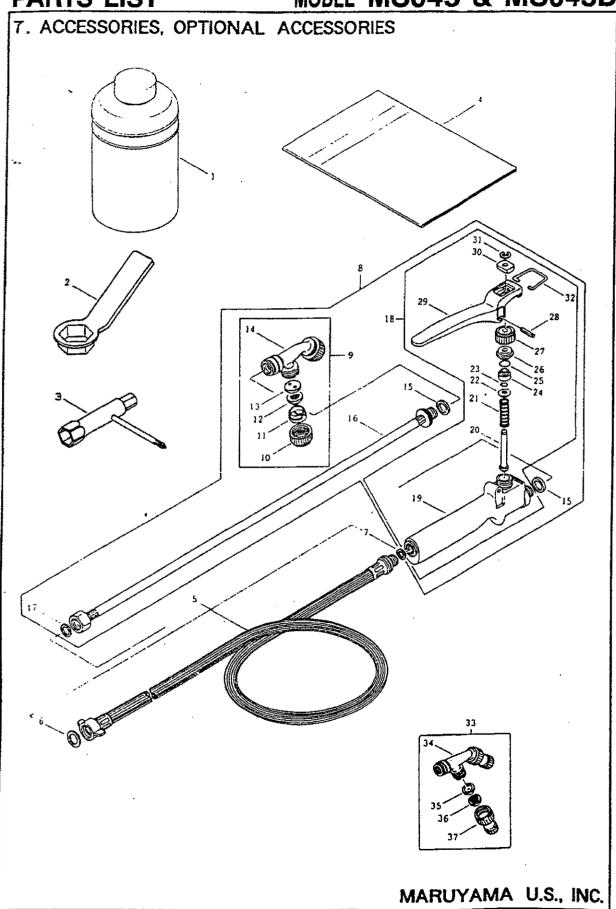

Ref. No.	Parts No.	Parts Name	Q'ty	Ref. No.	Parts No.	Parts Name	Q'ty
7-1	022540	Fuel blending bottle (0.51)	1			OPTIONAL ACCESSORIES	
7-2	022097	Box spanner (21)	1	7-33	996084	Nozzle ass'y (Driftless)	1
7-3	210418	Box spanner (19)	1	7-34	107487	· Nozzle pipe	1
7-4	113046	Instruction manual (MS045D)	1	7-35	107488	· Packing	2
	106372	Instruction manual (MS045)	1	7-36	107489	• Strainer	2
7-5	105633	Hose ass'y (7.5x1300L)	Ì	7-37	107490	• Nozzle tip, ass'y	2
7-6	100707	• Packing (011.5x016xt2)	1				
7-7	100712	• Packing (07x010.5xt1.5)	1 1				
7-8	106357	Nozzle/wand ass'y					
7-9	814267	• Nozzle, ass'y	1				
7-10	103173	. Cαp	2				
7-11	103172	" Orifice disc	2		·		
7-12	106358	• Strainer	2				
7-13	106359	- Packing	2				
7-14	103170	·· Nozzle pipe	1		;		
7-15	028819	• Packing (012x016xt2)	2				
7-16	106360	· Nozzle pipe (PF1/4)					
7-17	107615	· Packing (07.5x011xt2)					
7-18	814268	· Grip, ass'y]				
7-19 .	106361	• Grip (PF1/4)	ı				
7-20	106362	• Valve rod					
7-20	106363	• Spring	1				
7-22	106364	• Washer (05.5x09.7xtl)	1				
7-23	014180	- O-ring (P5)					
7-24	106365	- Bush					
7-25	011681	- O-ring (P7)					
7-26	106366	" Guide	1 1				
7-20	106367	Galae Cap					
7-28	106368	" Spring pin	1 1				
7-20	106369	•• Lever	1				
				 			-
7-30	106370	•• Washer	l ı	[
1	020381 106371	• E-ring	1				
/-oz	1003/1	·· Lock	l		}		
							-
					f		
	İ						

PARTS LIST

MODEL MS045 & MS045D

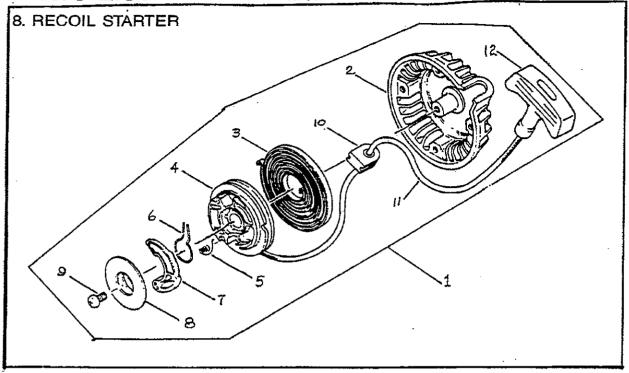

Ref. No.	Parts No.	Parts Name	Q'ty	Ref. No.	Parts No.	Parts Name	Q'ty
8-1	573970	Recoil starter, ass'y	1	8-6	943221	·Spring, brake	l
8-2	574008	• Recoil starter case	1	8-7	943220	• Pawl	1
8-3	574007	• Recoil spring	1	8-8	944328	· Retainer	1
8-4	944724	Reel	ì	8-9	94480I	• Screw	1
8-5	943467	·Spring, pawl	1	8-10	944239	• Rope guide	1
				8-11	944240	Rope (890L)	l
				8-12	944241	• Grip	1
				•			



Maruyama U.S., Inc. 3570 Shelby Lane Denton, TX 76207 940-383-7400 voice 940-383-7466 fax